


1958 NOMAD WAGON SIDE MOLDING CLIP PACKAGE

These are the 8 packages which contain nuts, bolts, and screws which are used to attach the exterior side molding to your 1958. Each bag is numbered and will match the corresponding description listed below.

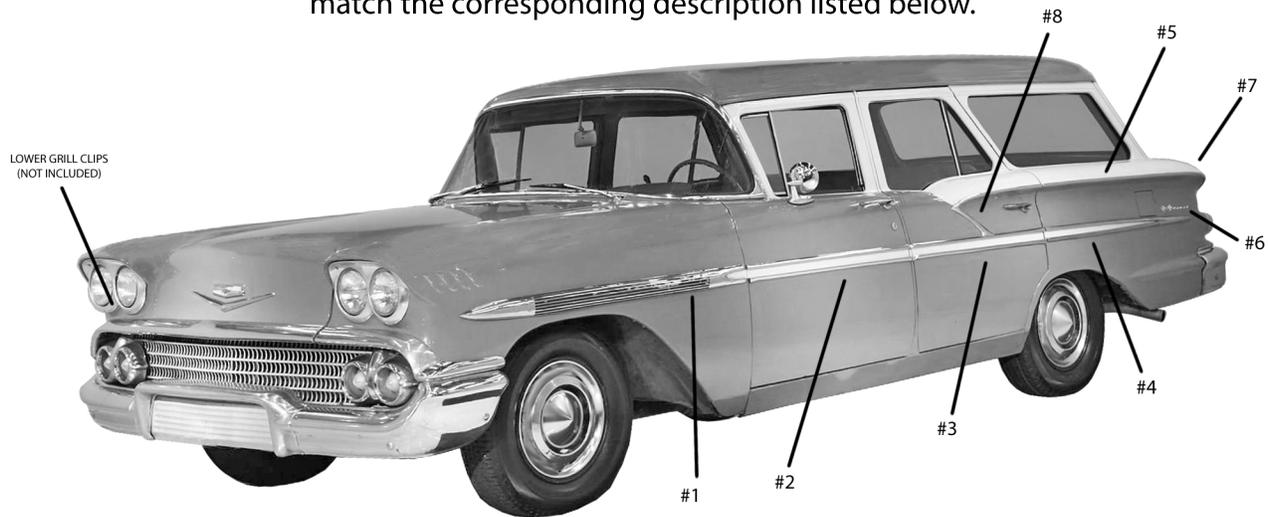

#1 The Fender Spear

12 - Large T-Bolts (58-1494)
4 - Small T-Bolts (58-1497)
2 - Medium Adjustable T-Bolts (front) (58-1496)
18 - Nuts

#2 The Front Door Moldings

16 - Bath Tub Clips (58-1478)
4 - Door End Clips (58-1486)
4 - Screws

#3 The Rear Door Moldings

20 - Bath Tub Clips (58-1478)
4 - Small T-Bolts (58-1497)
2 - Medium Adjustable T-Bolts (58-1496_)
4 - Door End Clips (58-1486)
4 - Screws
6 - Nuts

#4 The Lower Quarter Side Moldings

20- Bath Tub Clips (58-1478)
2 - Small T-Bolts (58-1497)
2 - Nuts

#5 The Upper Quarter Side Moldings

16 - Small T-Bolts (58-1497)
16 - Nuts

#6 The Quarter Script

12 - Barrel Clips (square slip clips)

#7 The S" Molding

(The molding that goes around the taillights)
14 - Small T-Bolts (58-1497)
14 - Nuts

#8 The Quarter Z-Molding

2 - Small T-Bolts (58-1497) (TOP)
2 - Medium Adjustable T-Bolts (58-1496) (BOTTOM)
4 - Nuts

DO NOT OVER TIGHTEN THE BATHTUB CLIPS.
THEY WILL MARK YOUR PANELS
THEY NEED TO HAVE SOME MOVEMENT TO ASSIST INSTALLING THE MOLDINGS.

ALSO AVAILABLE

Bath Tub Clip Tool (part# 58-1480) \$24.95
Lower Grill Retainer Clips sets (part# 58-1711) \$7