


Body Mount Bolt Kit Instructions
1958 Chevrolet (all models EXCEPT convertible)

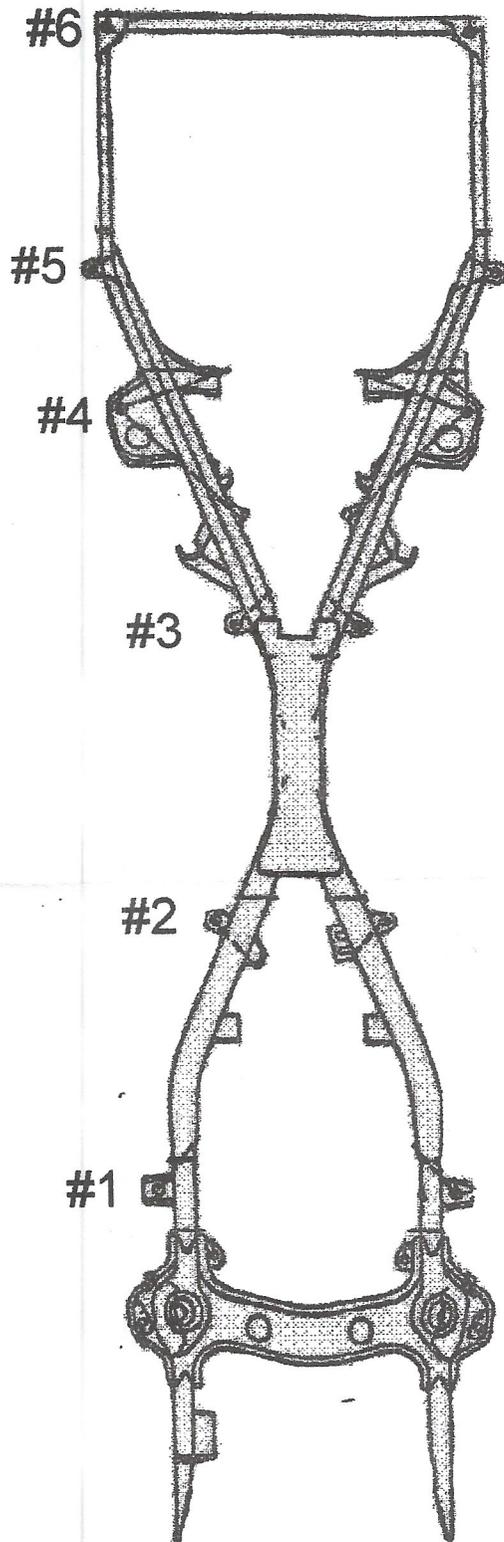

Front View From Top

 Bolt goes in from bottom

 Bolt goes in from top

Mount #1  2 1/2" bolt, 1 3/4" washer
(2) washers and nut

Mount #2  2 1/2" bolt, 1 3/4" washer

Mount #3  2 1/2" bolt, 1 3/4" washer

Mount #4  2 1/2" bolt, 1 3/4" washer

Mount #5  2 3/4" bolt, 1 3/4" washer

Mount #6  2 1/2" bolt, 1 3/4" washer