


1955-1957 Chevy 2dr HT/Convert/Sedan Power Door Regulator Template

Flip template over for
opposite door

Drill 3/8" holes
in each of these
locations for
new power
regulator

Front of door
→

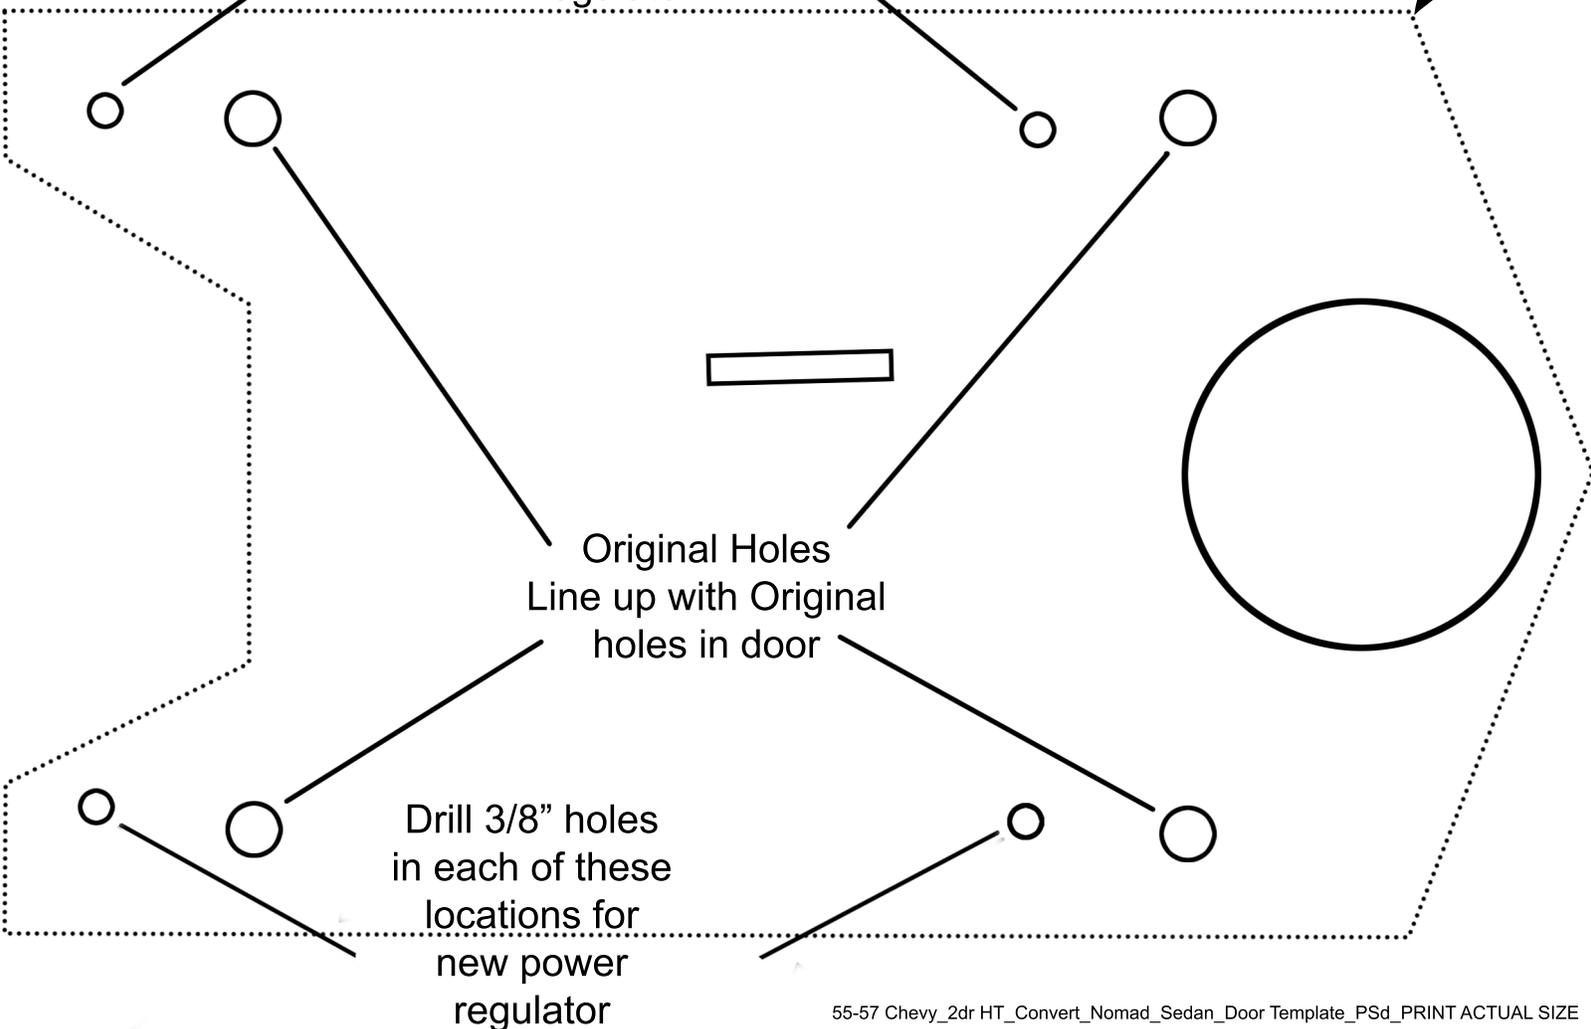

Original Holes
Line up with Original
holes in door

Drill 3/8" holes
in each of these
locations for
new power
regulator