


# 1955-1957 Chevy 2 dr Sedan Power Quarter Regulator Template

Flip template over for opposite qtr

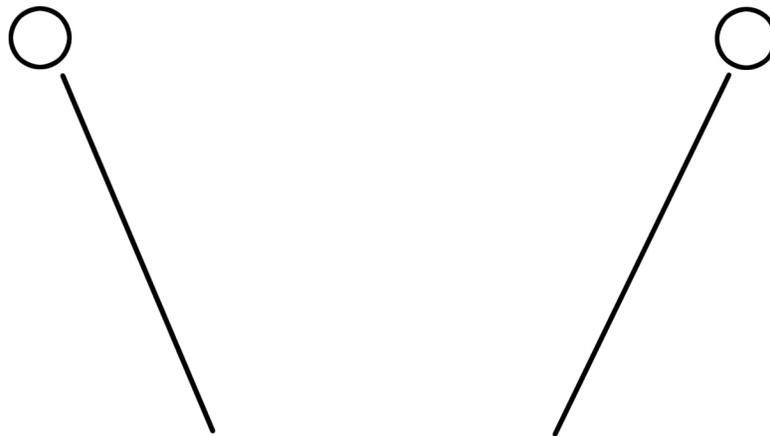


Line these holes up with the original  
manual regulator holes

Drill a 3/8" hole  
here for the  
new power regulator



This hole is an original  
manual regulator hole  
that you will use  
again for the  
power regulator.

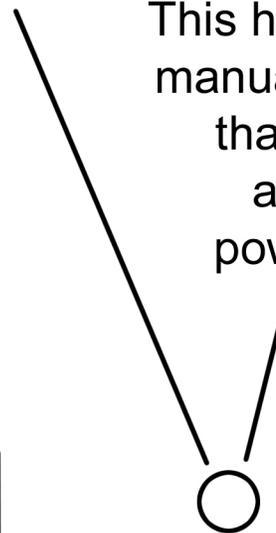

Cut along line and splice template 1 and 2 together

