


Aluminum Shroud Installation

Tools Required: Drill with 1/8" Bit and Pop Rivet Gun



1. Align shroud flange with radiator flange in desired position.

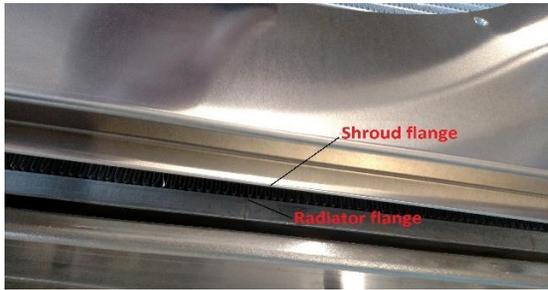

2. Drill 4 – 1/8" holes. Usually next to the louvers top and bottom will provide sufficient support. It is best to drill one at a time to keep the alignment. There is no coolant running behind the radiator flange so you are not in danger of springing a leak.



3. Use supplied pop rivets to secure the shroud to the radiator. 4 rivets should be sufficient but 6 are supplied. Now you are ready to attach the fan.

