


INSTALLATION INSTRUCTIONS

HYDRO-BOOST


-PUMP AND BOX MUST BE CLEAN-

1. Connect from small port of Power Steering Pump to the large port in Hydroboost end, reusable fitting will go on top of a metric 16 new style or a 5/8 flared fitting (sometimes using a 45 or 90 degree adapter).
2. Connect from small port of Hydroboost to big port of Box.
3. From splitter of Hydroboost to Box small port to side of T on 16 or 5/8, depending on style of Power Steering Pump.
4. From 90 degree (connected to T), connect to large port of Power Steering Pump.

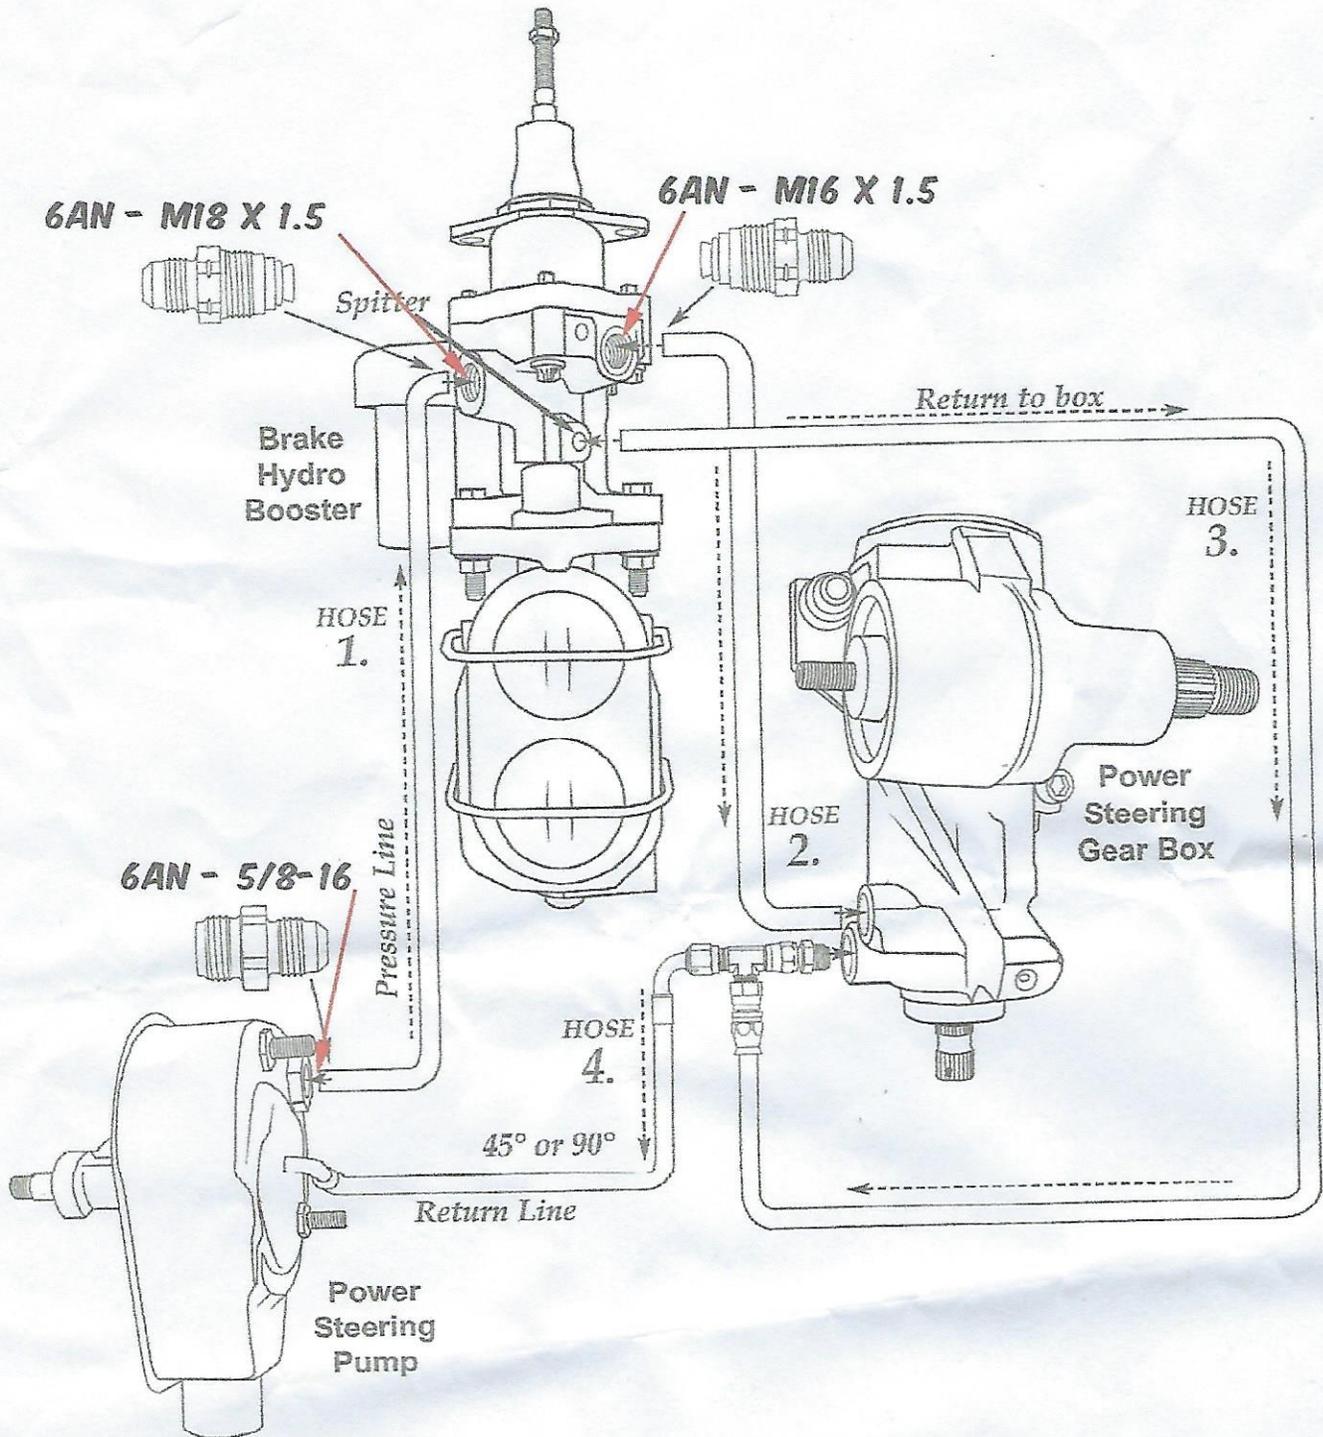

Hydro-Boost rotation for valve cover clearance

Your Hydro-Boost can be rotated 180° to move the accumulator to the upper LH side if you are having clearance issues. Simply remove the master cylinder, unbolt the firewall plate, rotate Hydro-Boost 180°. Now re-install the firewall plate and master cylinder. This will give you additional valve cover clearance required when running an LS engine or tall valve covers or for any reason you may have clearance issues.

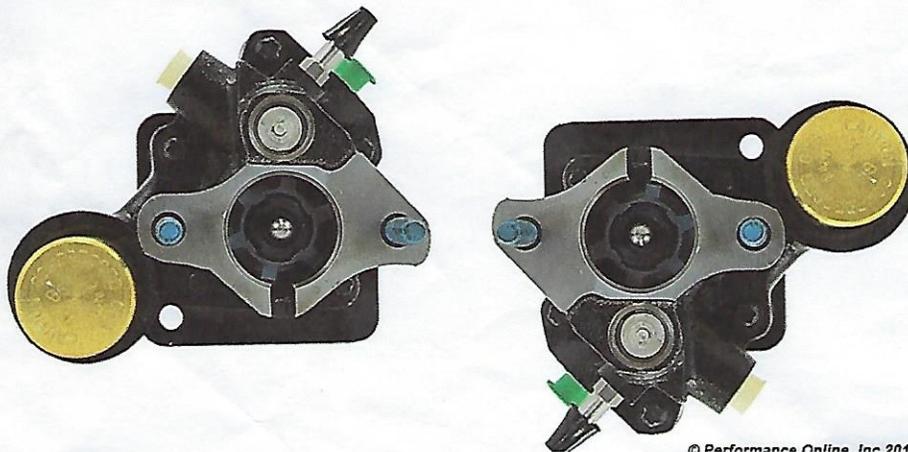

© Performance Online, Inc. 2019